

# INSTRUCTIONS for **YELLOW JACKIT™ HANDLE INSTALLATION**




## **Tools Required:**

1. Flat head screwdriver.
2. 5/16 Hex head socket.



## **Rod and Chain Identification:**

1. Remove plastic and Instruction Manual from handle.
2. Store Instruction Manual in safe dry place.
3. Locate chain and rod pin (#SH106) on bottom of crank

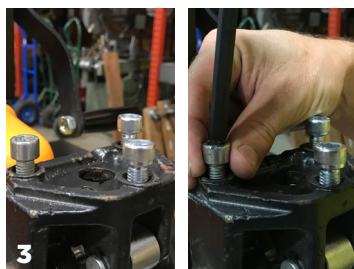


## **Handle Platform (Base)**

1. Remove three screws (#H109) and three spring washers (#H110) from the base.



## **Placement of Handle on Base:**

1. Place the handle (#SH101) on the base (#103).  
NOTE: Feed the rod and chain (#SH106) through the center of the base (#103) and axle (#109).
2. Replace the three screws (#H109) with spring washers (#H110) into the base (#103) and tighten securely.

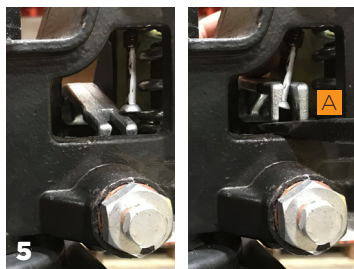

## **Connecting Rod and Chain**

Be sure the rod and chain (part #SH106) are properly inserted into crank link (part #139H). It's necessary to lift the crank link (A) with a flat tip screwdriver to allow the rod and chain to slide into place.